

GERRY CARRIER

INSTRUCTIONS

(Keep for future reference)

Sold and Manufactured by

gAngIAArtifActs

GERRY CARRIER INSTRUCTIONS

(Keep for future reference)

For A Fresh Looking Gerry

the Gerry Pack seat and straps should be washed frequently! The entire seat is color-fast and can be machine washed!

Disassembly instructions

1. Untie lacing on waist band and cord.
2. Pull out cross bow, one side at a time. It may pull hard.
3. Slip off rubber feet.
4. Remove clip from center of shoulder strap by putting knife blade under one end and snapping out.
5. Set carrier in position (Fig. 4). Begin to slip seat over frame by pushing right side of hem up and around frame. Push entire seat to the left until it comes off left leg of frame.



Fig. 1

Gerry Seat-Pack Assembly Instructions

1. Set frame on solid surface with legs UP and U FACING YOU.
2. Place seat on surface with LEG HOLES UP. (Fig. 2)
3. Pick up seat and slip the RIGHT opening of hem (A) AT THE BACK, over right leg of frame.
4. Continue slipping hem over frame until you come to U PORTION OF HEM

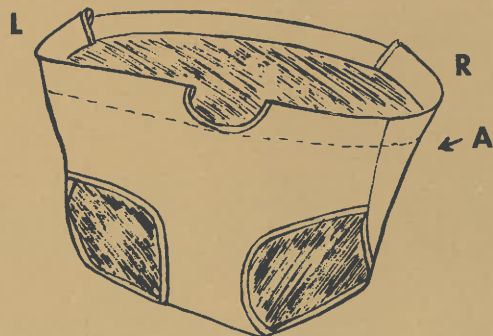


Fig. 2



Fig. 3

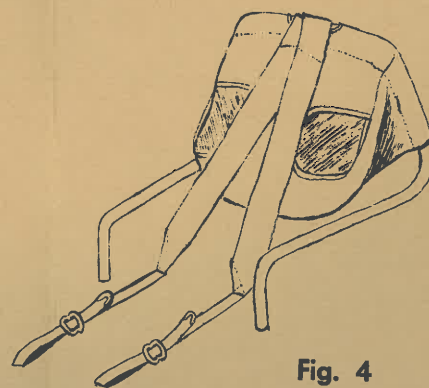


Fig. 4

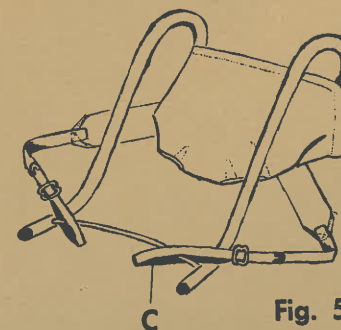


Fig. 5

5. Place center loop (B) of shoulder straps, RIGHT SIDE UP, TOWARD YOU, over your finger so that your finger goes through the loop of BOTH PARTS OF STRAP. (Fig. 3)
6. Now slip loop (B) over right leg of frame. (Fig. 3)
7. Continue putting left half of hem over frame.
8. Now pull entire seat around frame until U ON HEM sits on center of frame (Fig. 4)
9. With carrier in POSITION OF FIG. 4, flip shoulder straps UP AND OVER TOP of carrier.
10. Insert wire clip into holes of frame, which are exposed by the U IN HEM. Snap clip into place, one side at a time.
11. Put rubber feet on legs of frame.
12. Turn carrier over. Arrange shoulder straps flat under carrier with tails OUTSIDE of the frame legs. (Fig. 5)
13. Slip loops (C) over each end of cross-bow. Insert cross-bow one end at a time into holes on leg of frame. (Fig. 5)
14. Place waist band under cross-bow and legs, WRONG SIDE UP.
15. THREAD CORD (Fig. 6)
16. Tie a Parcel-post knot. A Parcel-post knot is a one-direction slip knot which you should adjust continually to keep the waistband ALWAYS TIGHT. This makes your carrier comfortable! (Fig. 7)
17. Pull cord (D) to the left while holding the frame by the right leg. Pull cord until waist band is very tight. The band should ALWAYS be tight.
18. Tie a bow.
19. Adjust shoulder straps so waist band rests just below your waist.

YOU'RE OFF

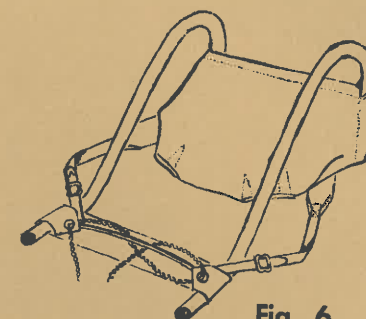


Fig. 6



Fig. 7

for use ONLY with poet
grOnk s3:3